


# FACIL3EH - E2H Quick reference


IP2018 • 2015-07-20

 Before installing the product, carefully read the instructions.


## 1. ELECTRICAL CONNECTIONS FOR STANDARD INSTALLATION

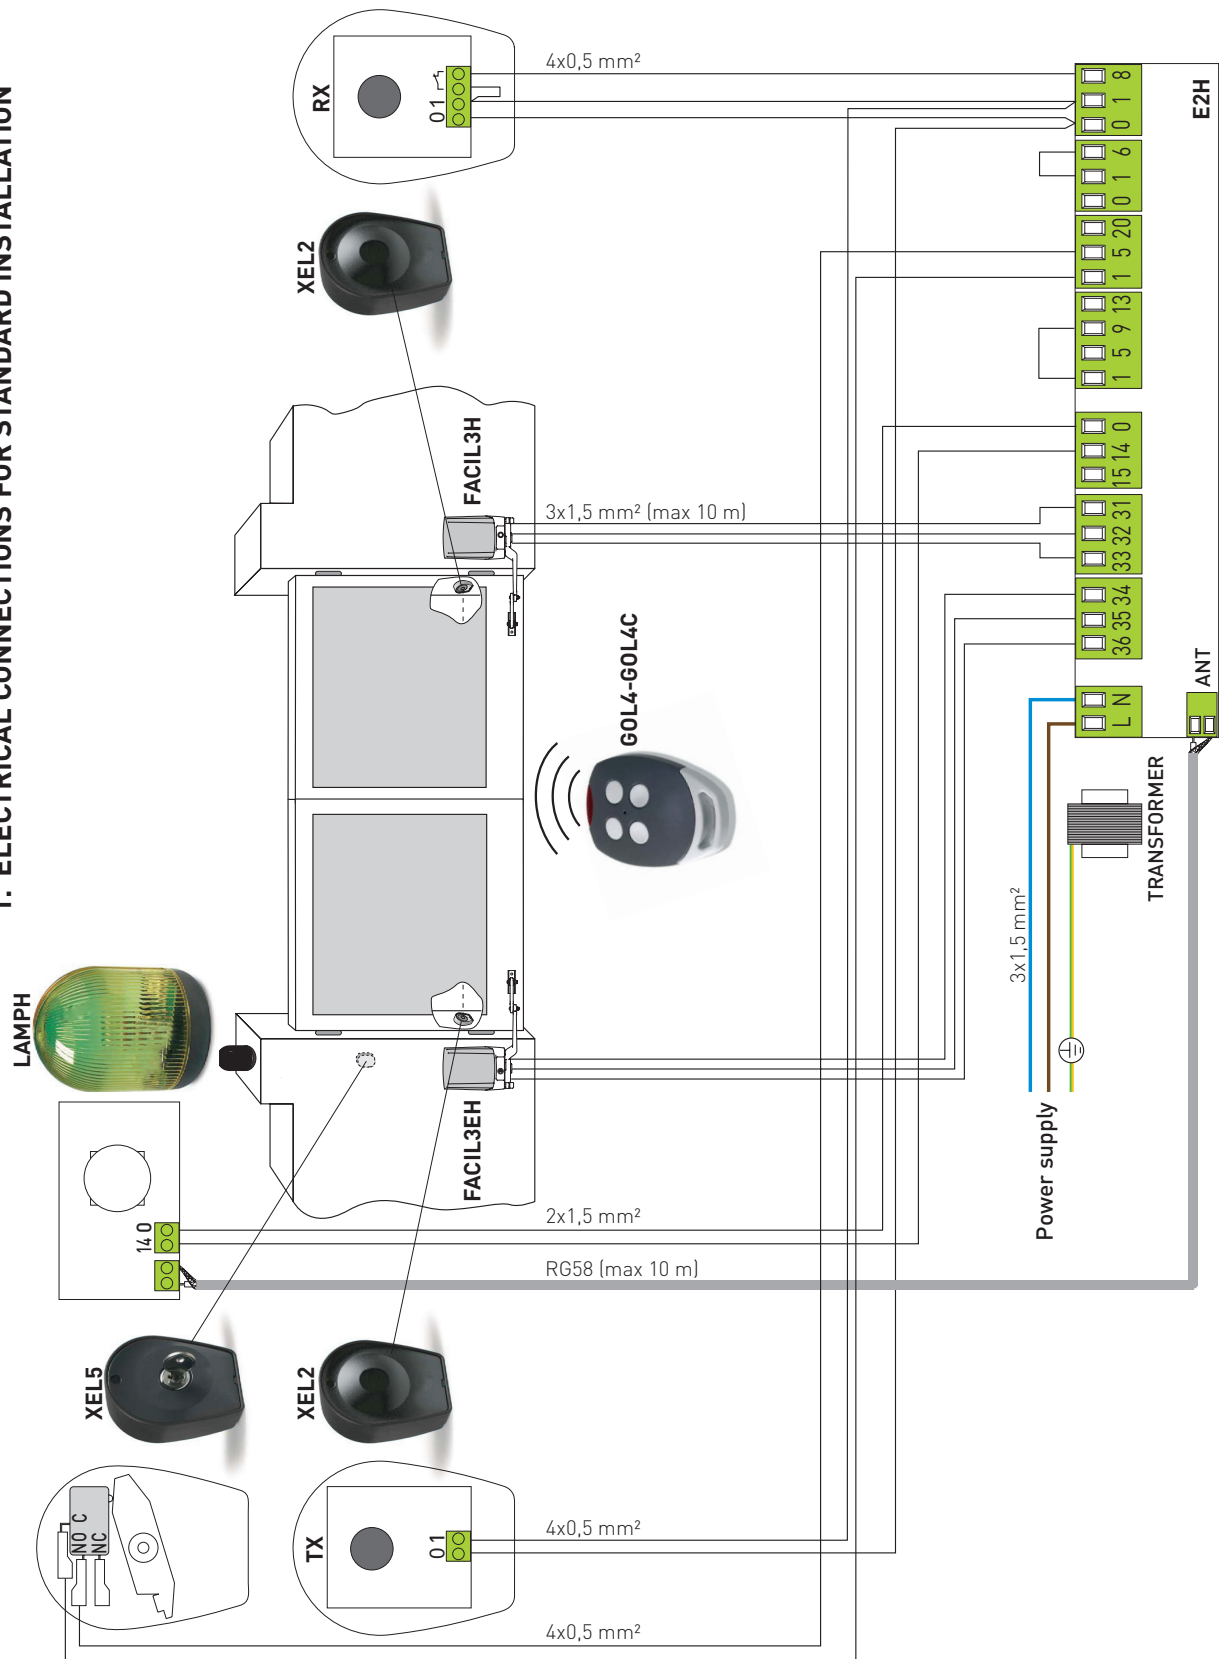


## 2. Limit switches connection (optional)

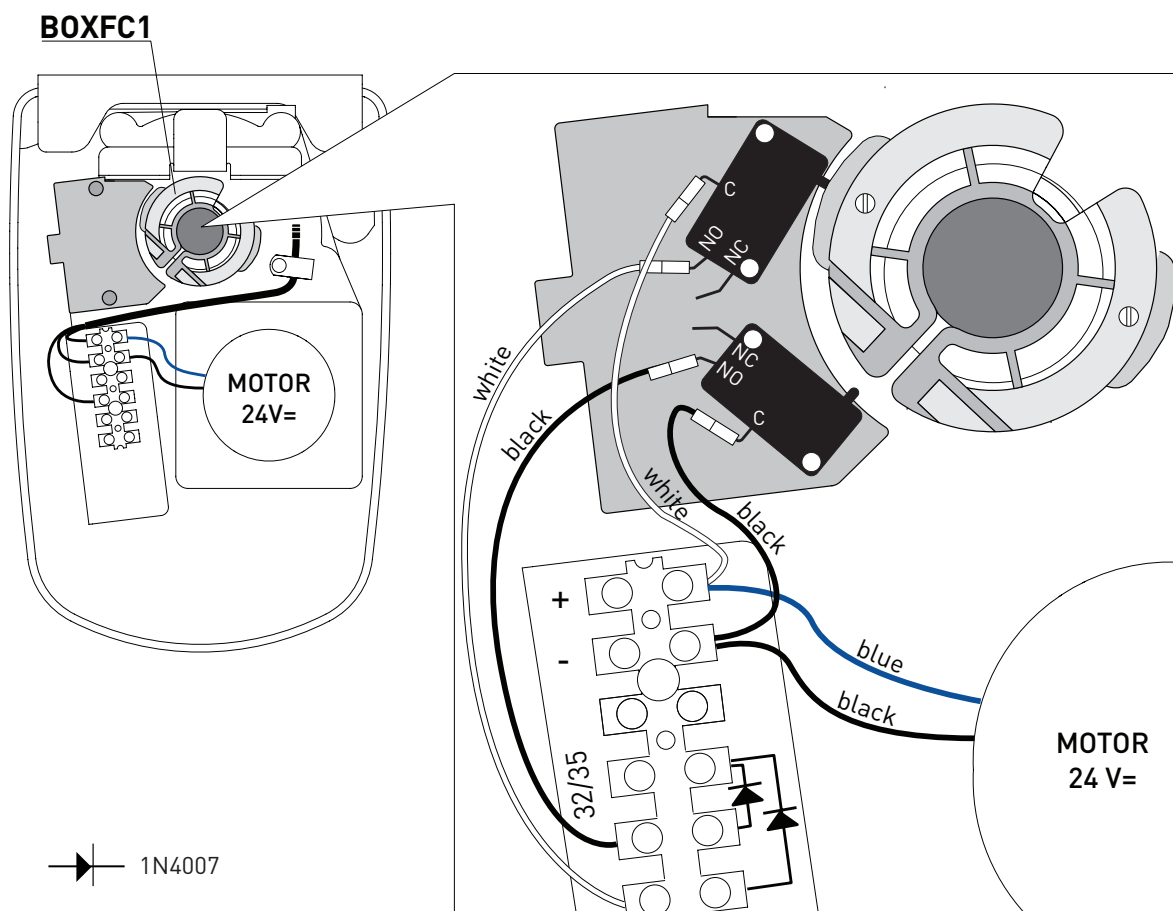


## 3. FACIL3EH motors connection

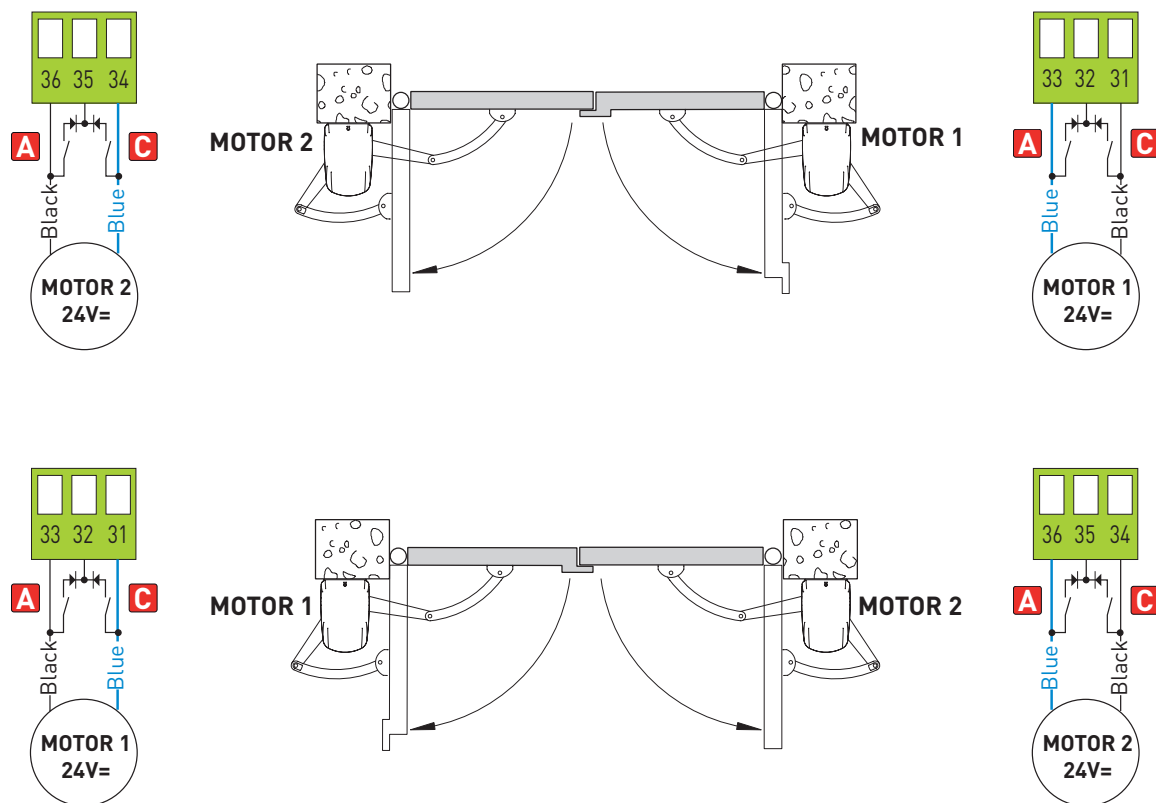


## 4.1 Usage without limit switches

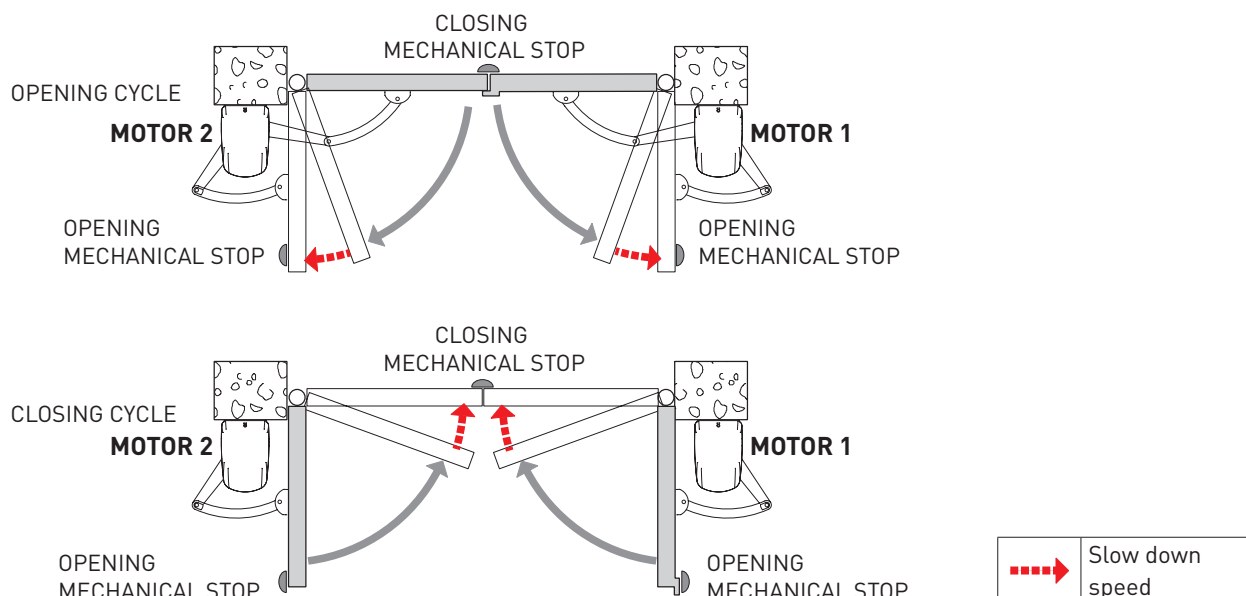


## 4.2. Usage with stop limit switches (optional) - default setting

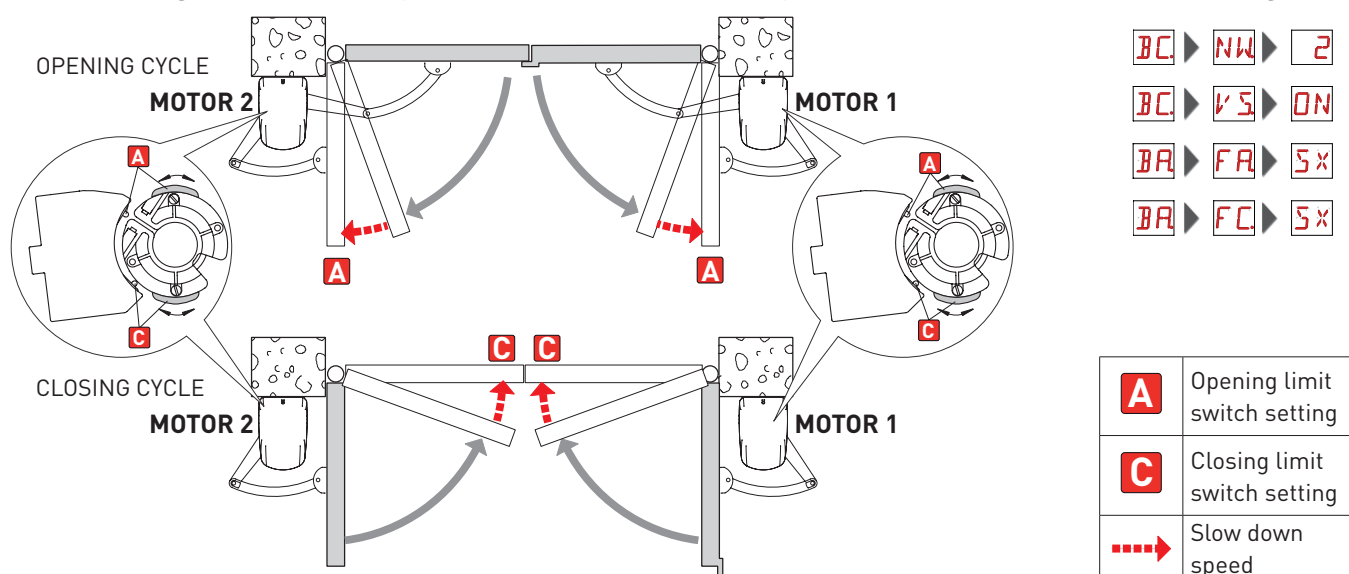

## 4.3. Usage with slow down limit switches (optional)

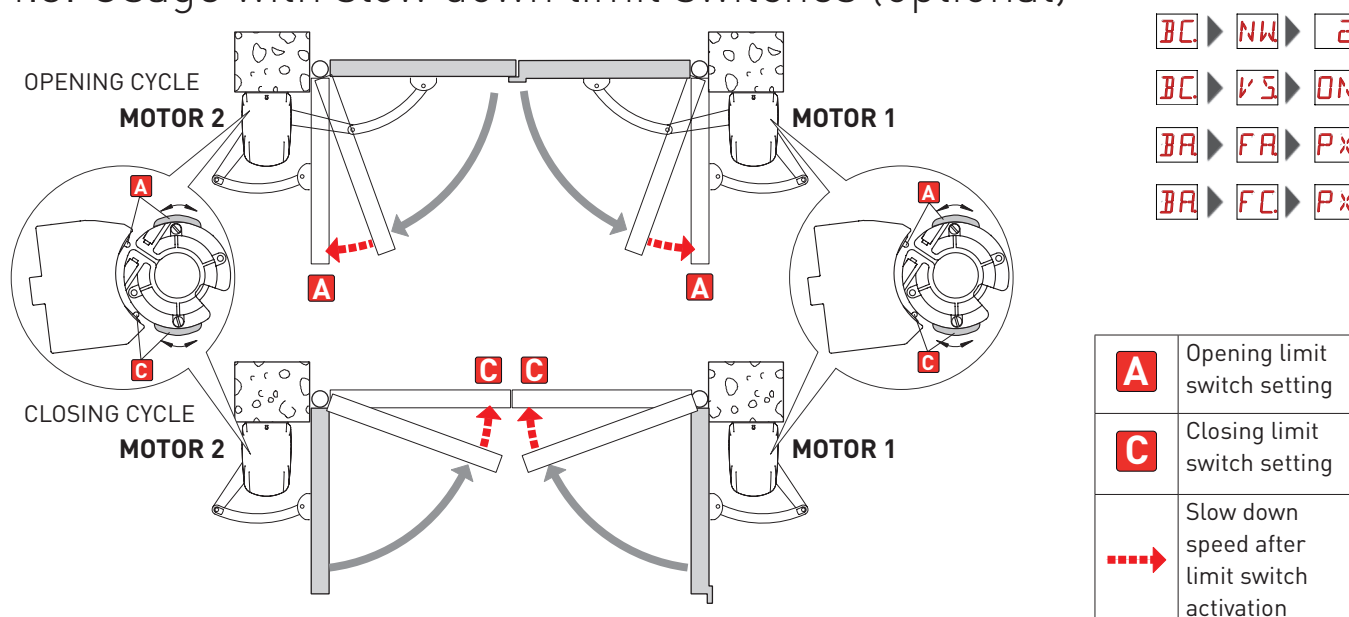

## 5. FACIL3EH setting

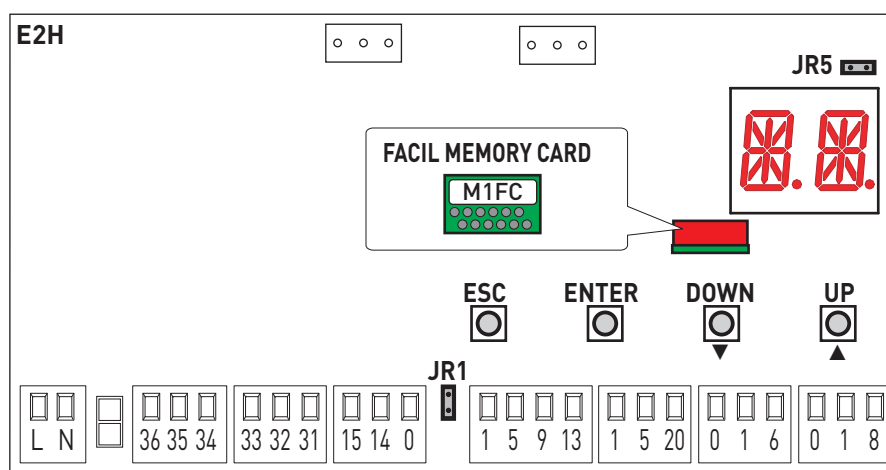

FIRST TIME ONLY WHEN POWER ON

## 6. Radio enabling



### 7.1 Step by step mode without automatic closing setting 🏠



### 7.2 Step by step mode with automatic closing setting 🏠 (Default: 1 minute)



### 7.3 Opening mode with automatic closing setting 🏠🏠🏠 (Default: 1 minute)



For different setting and further information consult the automation instruction manual, the control panel instruction manual and radio instruction manual.

**ENTRE//MATIC**



Entrematic Group AB  
Lodjursgatan 10  
SE-261 44, Landskrona  
Sweden  
[www.ditecentrematic.com](http://www.ditecentrematic.com)

